

F198735- Parts box (Level 1)

F198736 - Part box (level 2)

F198737 - Part box (level 3)

F000542 - R18 x G1/8 cube

Qty
2
Qty
6
Qty
8

F110239 - 10mm x 10mm union steel

Qty
2
Qty
4
Qty
6

F177972 -1/4 hose 10mm reusable with nut

Qty
2
Qty
8
Qty
8

F000658 - 6mm ferrule brass

Qty
6
Qty
12
Qty
16

F111941 - 6mm x R1/8 steel

Qty
4
Qty
6
Qty
8

F114892 - 6mm nut steel

Qty
6
Qty
12
Qty
16

F101063 - 6mm nut brass

Qty
6
Qty
12
Qty
16

F113779 - 6mm x R1/8

Qty
2
Qty
6
Qty
8

F114891 - 6mm ferrule steel

Qty
6
Qty
12
Qty
16

F101065 - 6mm x R1/8 elbow

Qty
4
Qty
6
Qty
8

F113781 - 6mm x 6mm union

Qty
6
Qty
12
Qty
16

F210382 - 3/8 hose 10mm reusable with nut

Qty
2
Qty
4

F101375 - R1/8 x G1/8 adapter steel

Qty
4
Qty
6
Qty
8

F118170 - filter kit

Qty
1
Qty
1
Qty
2

F115460 - injector plug

Qty
1
Qty
2

F104513 - 6mm x R1/8 steel















Qty
4
Qty
6
Qty
8

F177968 -1/4 hose 6mm stem reusable

Qty
4
Qty
8
Qty
8

F178064 -1/4 hose 8mm reusable with nut

Qty
2

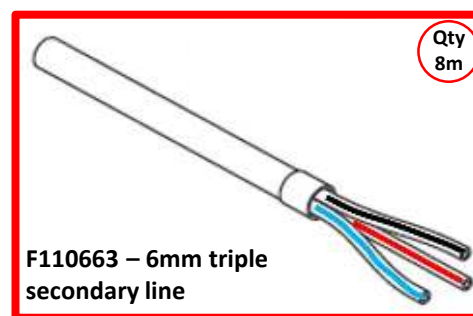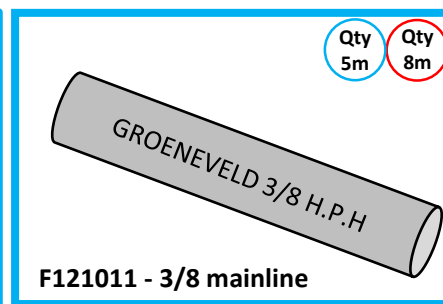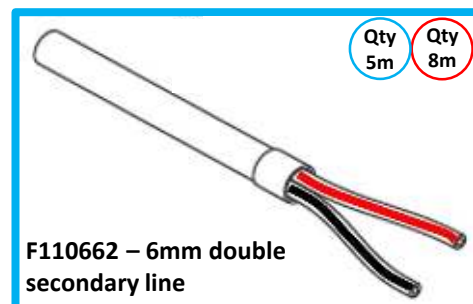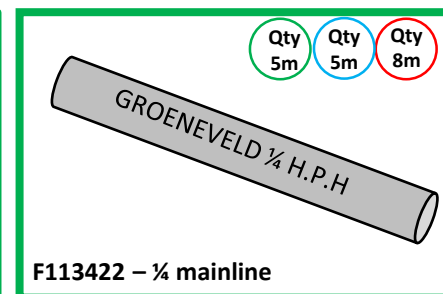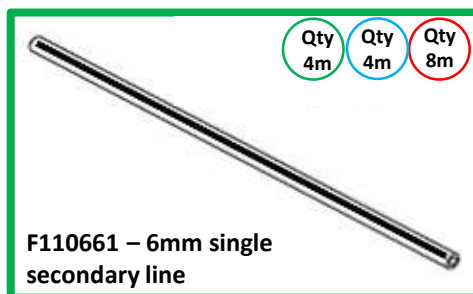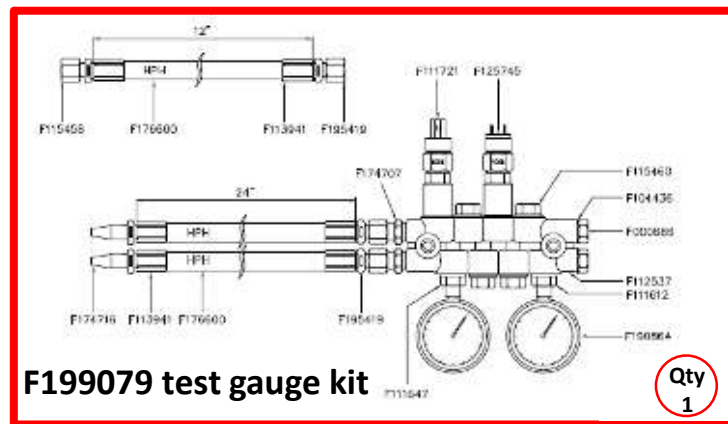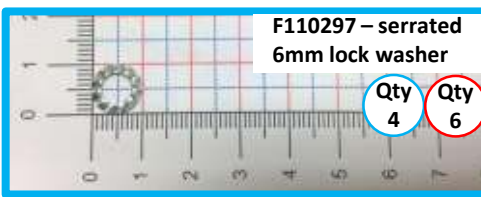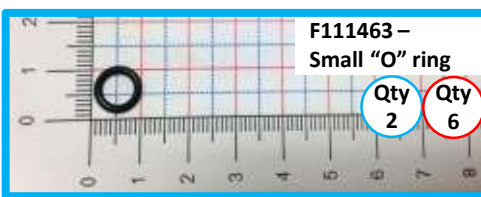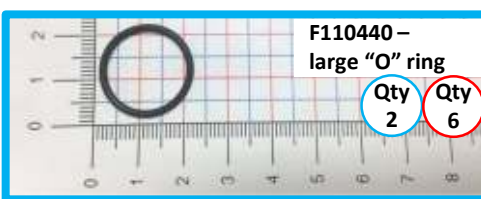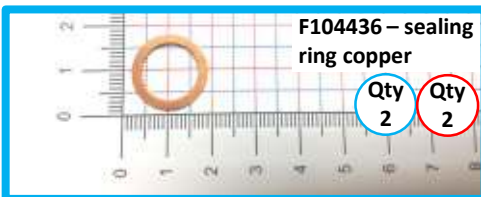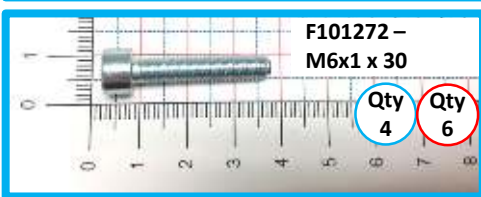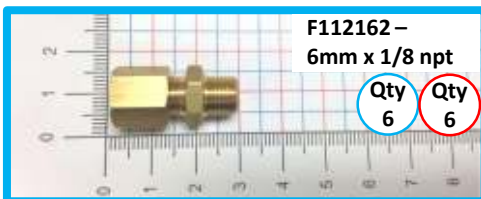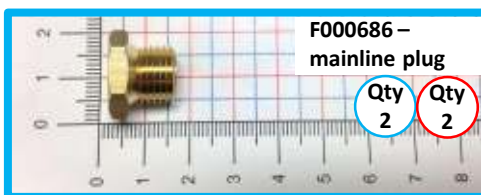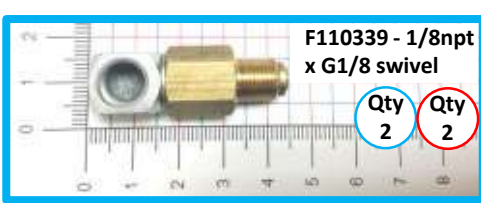

Preventative maintenance

1. Check for grease level in reservoir, minimum 1/3 full.
2. Perform a visual inspection of each grease point on the unit to determine if points are receiving correct amounts of grease.
3. Inspect the entire system for worn lines, leaks, secure mounting of components, pump and correct tying and routing of lines.
4. Fill the reservoir until the follower plate just passes the vent hole in the guide rod, take care not to trap air below the follower plate.

NEVER OVERFILL RESEVIOR.

For technical assistance and other available resources please contact

Brunswick, OH 800-586-7283
www.groeneveldusa.com

Milton, ON 800-263-7160
www.groeneveld-group.com

